

HARDWARE
TECHNICAL GUIDE

BARBERA.

ENTRANCE HANDLE COLLECTION



CYRUS ENTRANCE
large 900



CYRUS ENTRANCE
medium 700



CYRUS ENTRANCE
small 400



FERMAT ENTRANCE
small left



FERMAT ENTRANCE
small right



FERMAT ENTRANCE
medium left



FERMAT ENTRANCE
medium right



FERMAT ENTRANCE
large left



FERMAT ENTRANCE
large right

JOINERY HANDLE COLLECTION



FERMAT JOINERY
large left

FERMAT JOINERY
large right



FERMAT JOINERY
medium left

FERMAT JOINERY
medium right



FERMAT JOINERY
small left

FERMAT JOINERY
small right



FERMAT JOINERY
mini



FERMAT JOINERY
shower



MESSINA JOINERY
small



MESSINA JOINERY
medium

WALL HOOK COLLECTION




MESSINA WALL HOOK



PESCARA WALL HOOK

CYRUS ENTRANCE


SMALL 400

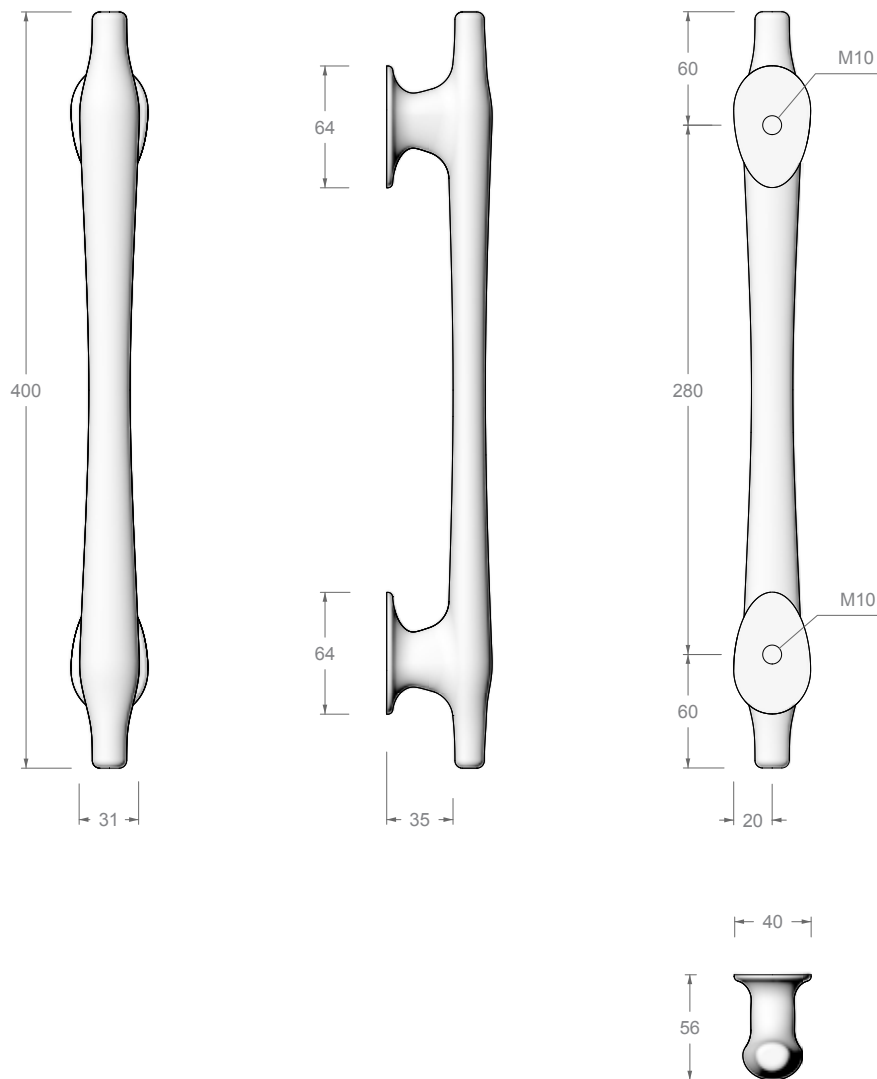

Scale = 1:4 @A4

CYRUS ENTRANCE


MEDIUM 700

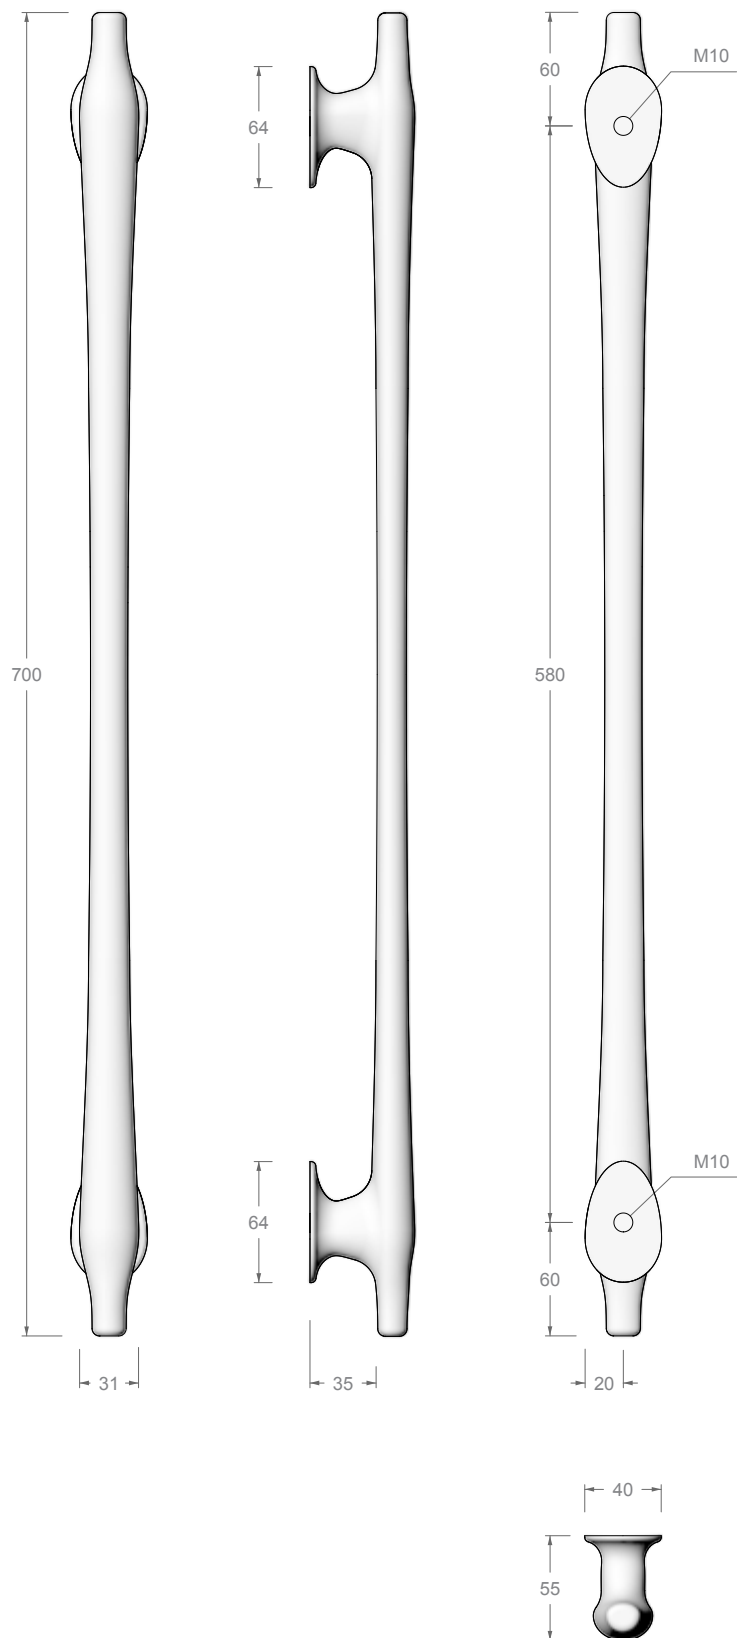

Scale = 1:4 @A4

CYRUS ENTRANCE



LARGE 900


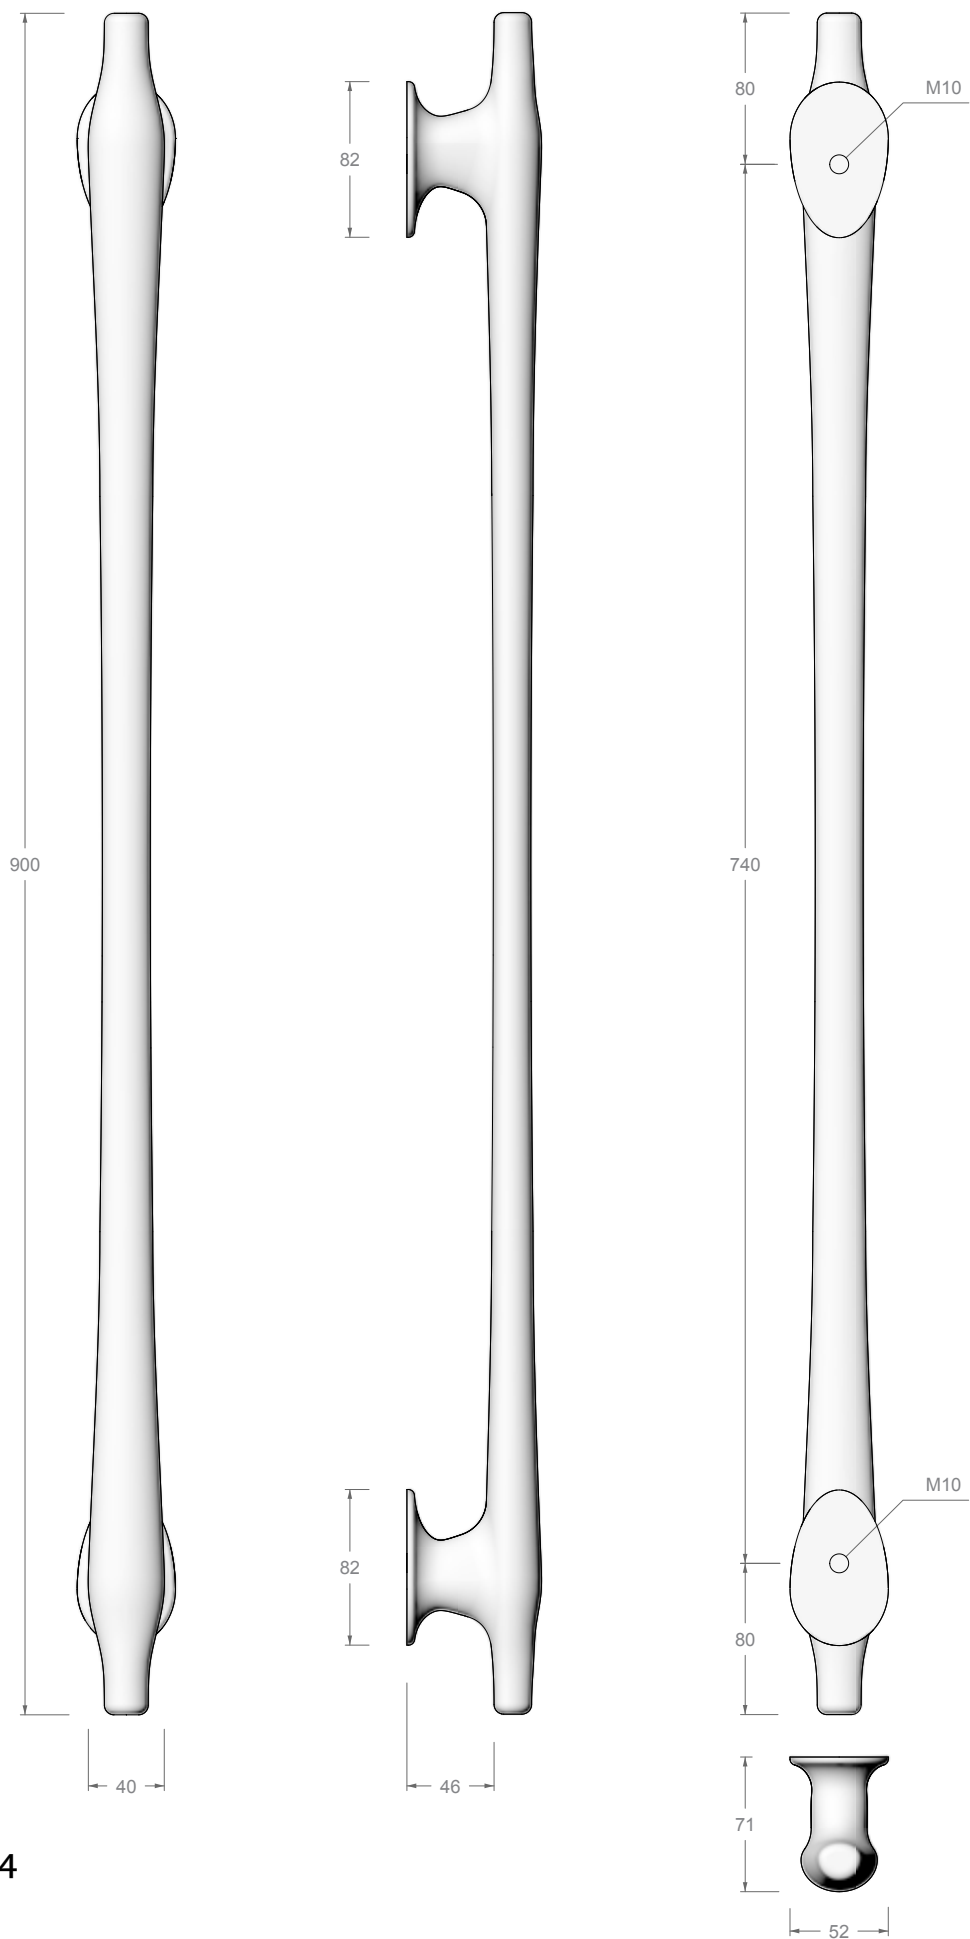


Scale = 1:4 @A4

CYRUS ENTRANCE

ASSEMBLY - BACK TO BACK

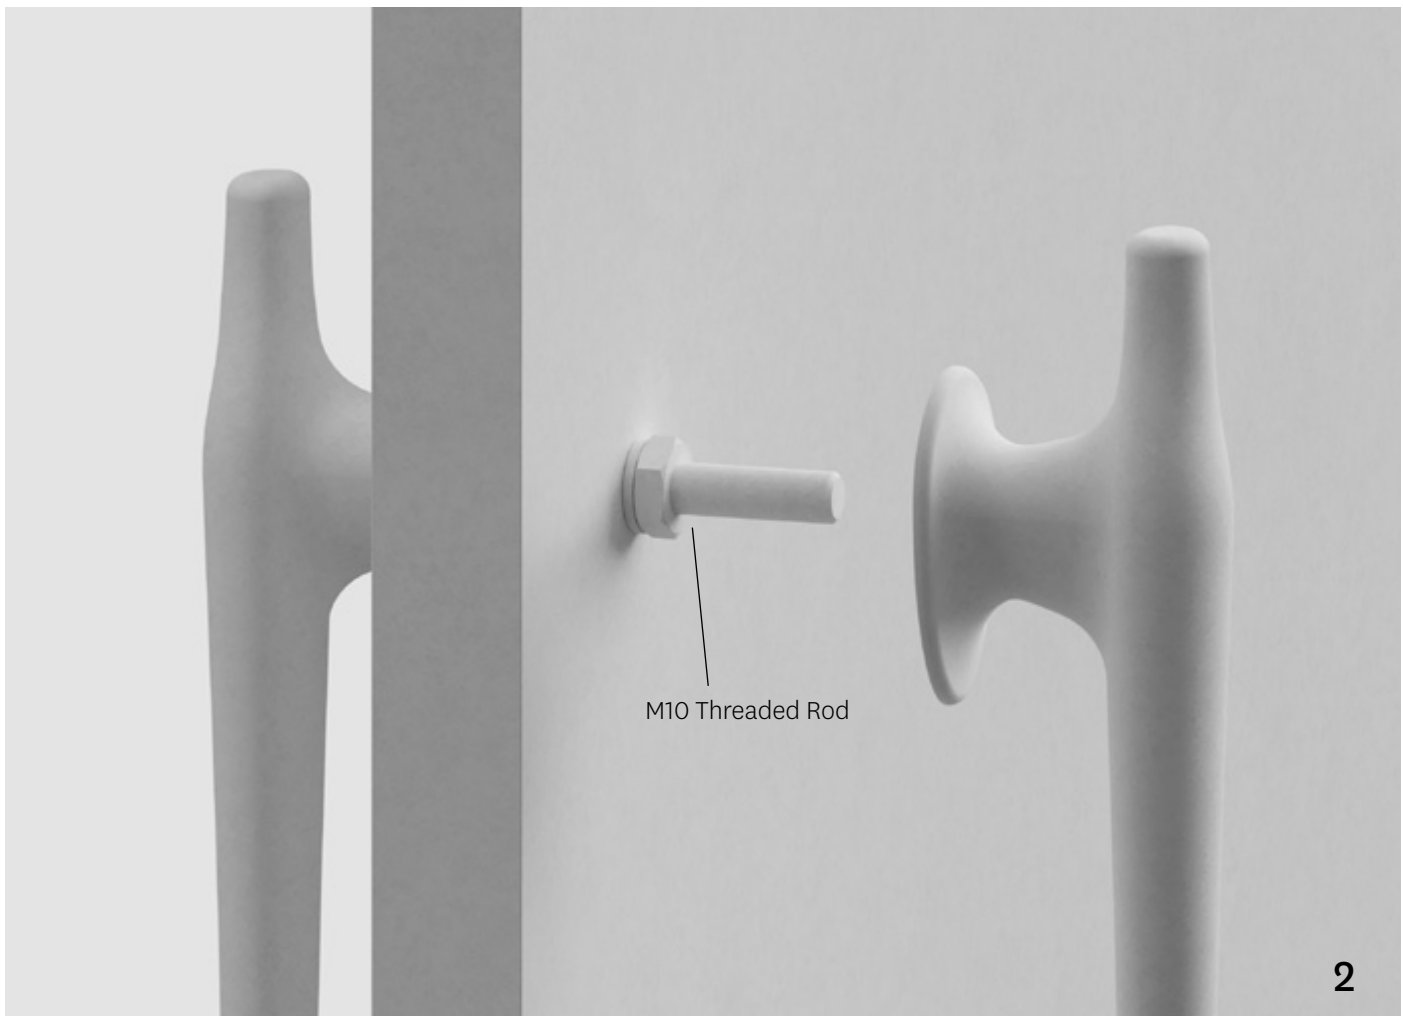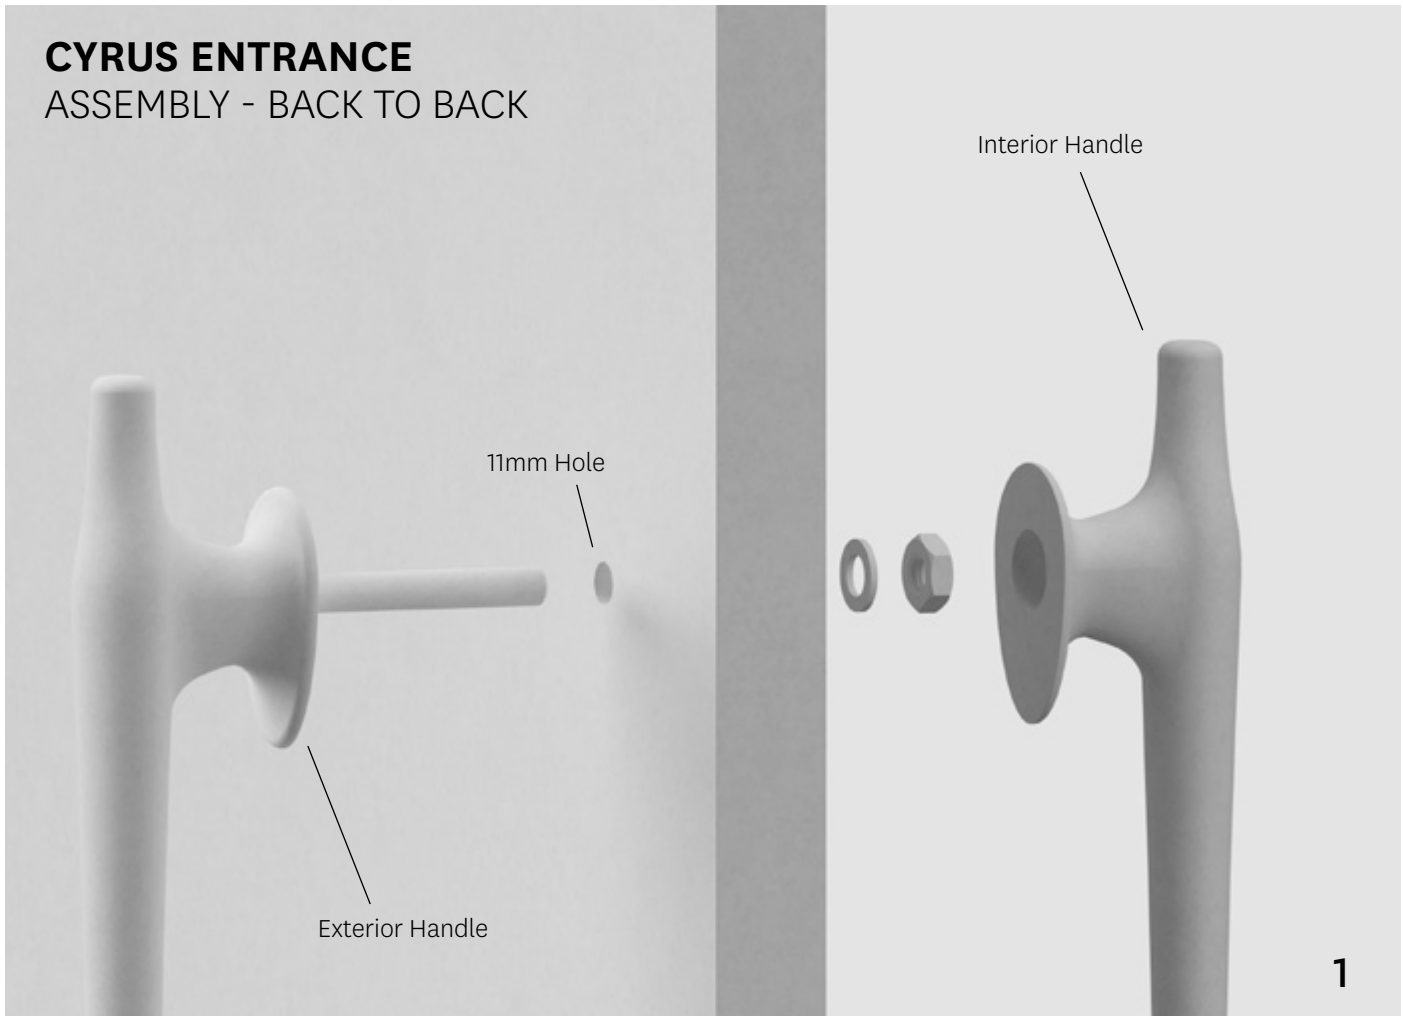

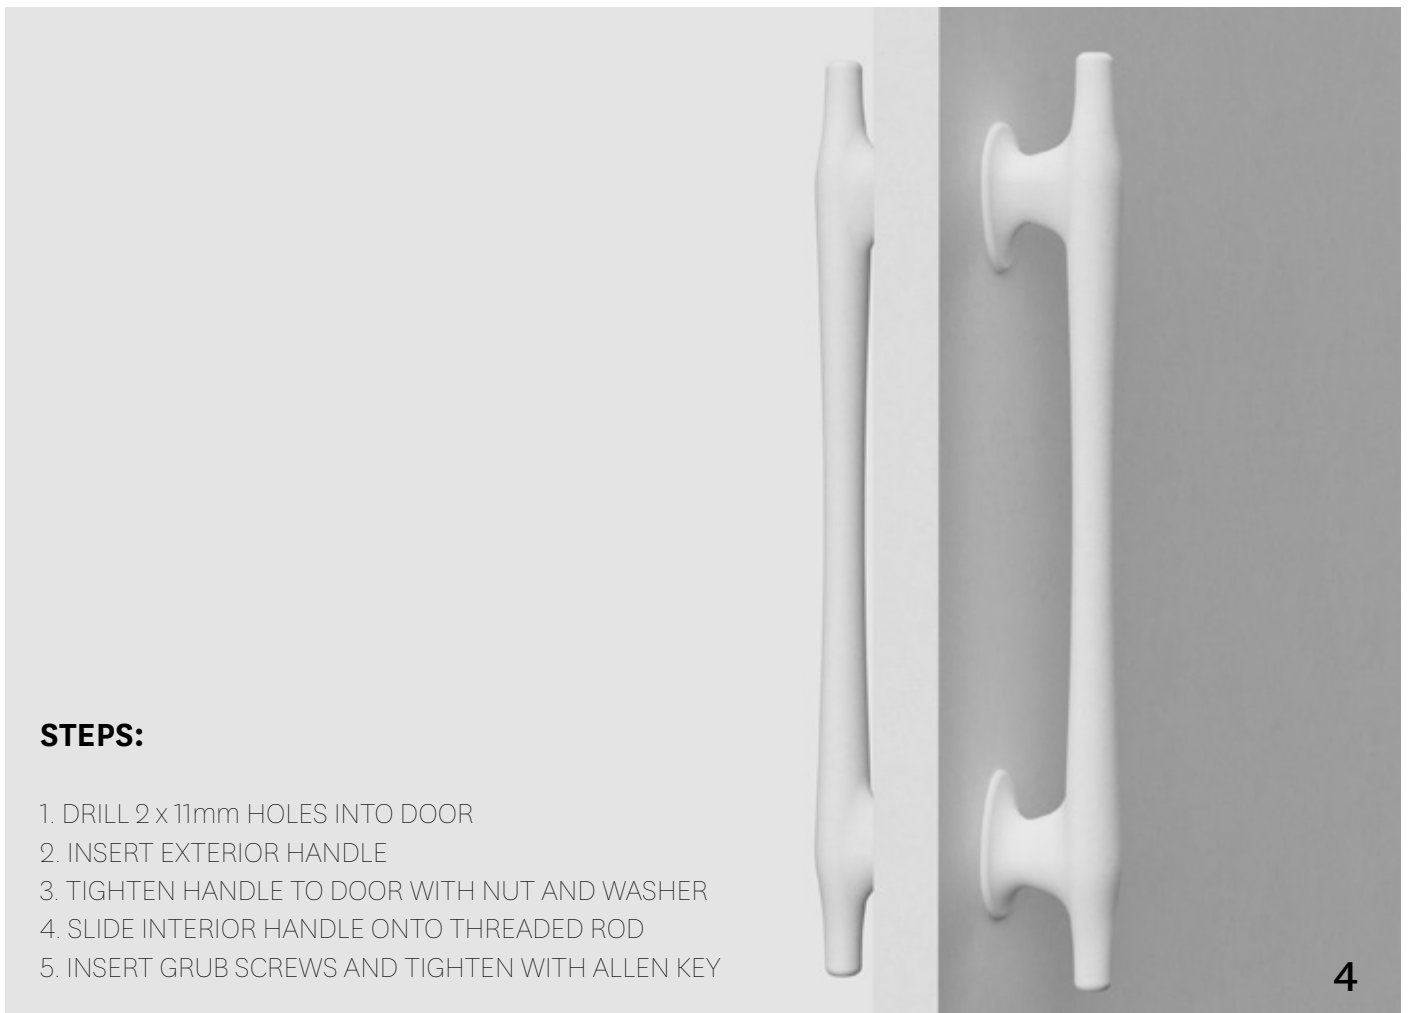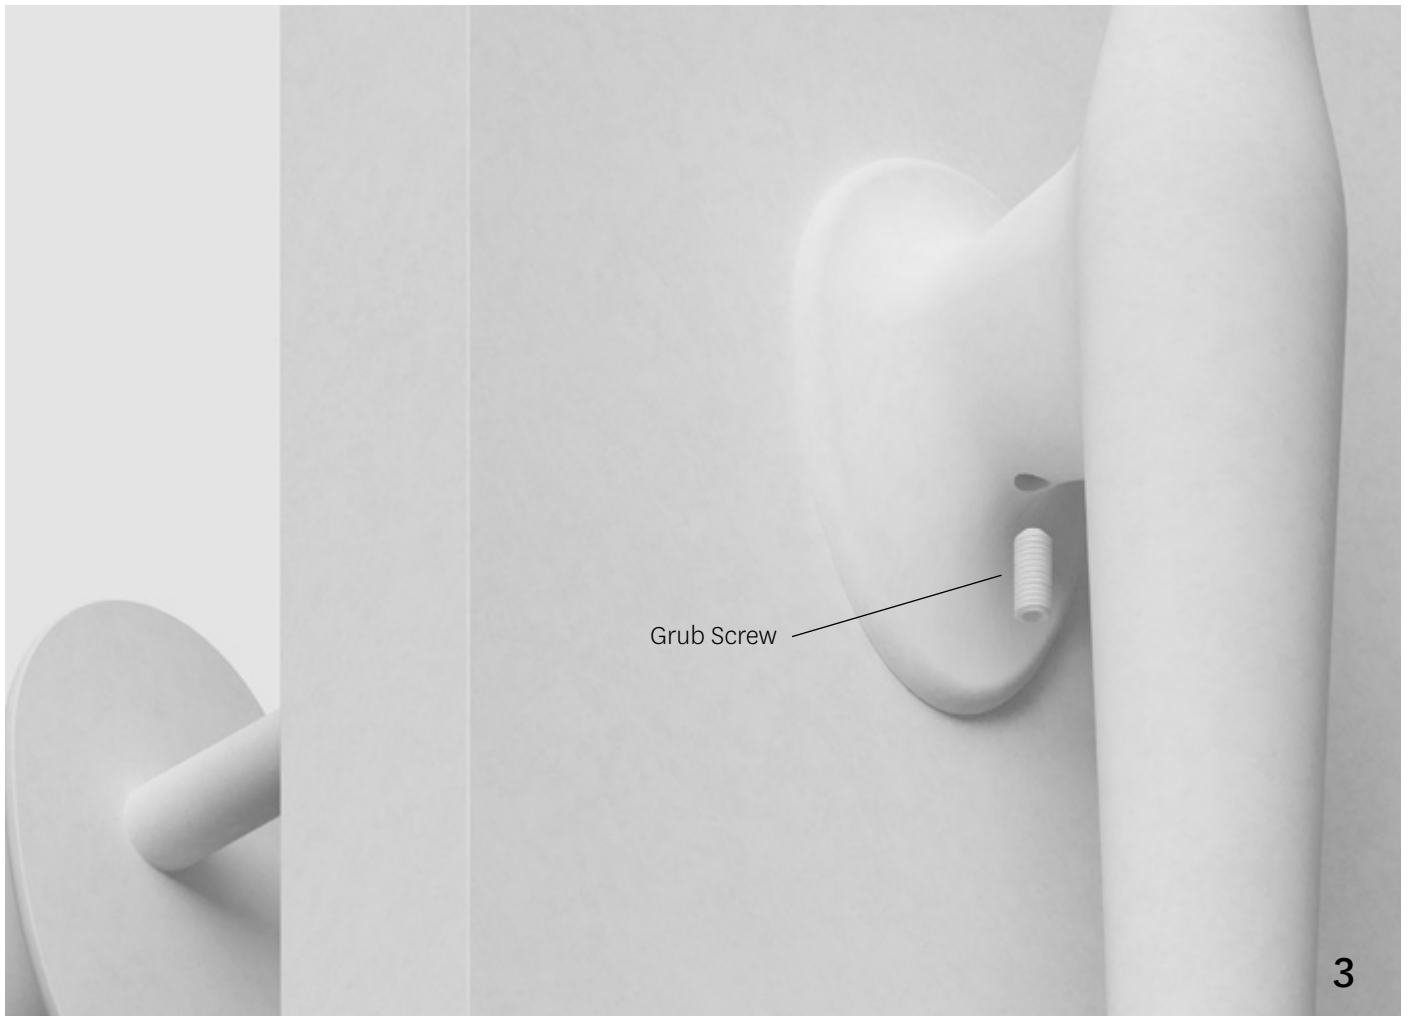

STEPS:

1. DRILL 2 x 11mm HOLES INTO DOOR
2. INSERT EXTERIOR HANDLE
3. TIGHTEN HANDLE TO DOOR WITH NUT AND WASHER
4. SLIDE INTERIOR HANDLE ONTO THREADED ROD
5. INSERT GRUB SCREWS AND TIGHTEN WITH ALLEN KEY

CYRUS ENTRANCE

ASSEMBLY - ONE SIDED




1


10mm Hole



M6 Joinery Bolt

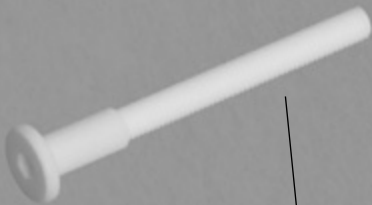

2

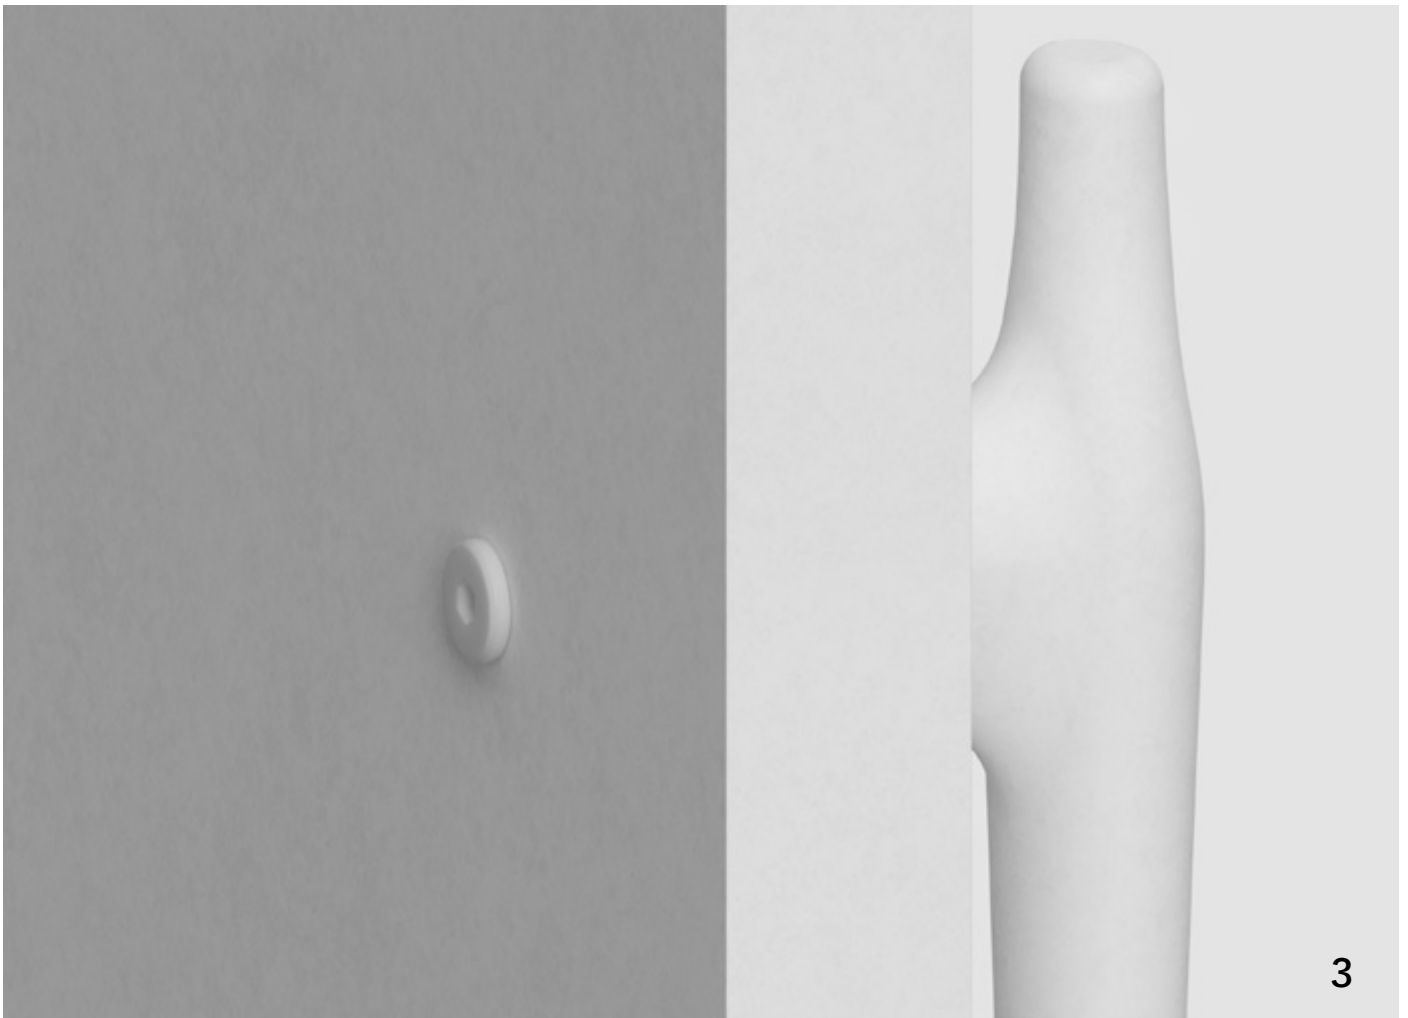

STEPS:

1. DRILL 2 x 10mm HOLES INTO DOOR
2. INSERT HANDLE
3. TIGHTEN HANDLE TO DOOR WITH JOINERY BOLT

BARBERA studio & showroom

By appointment:

5/213 Sunshine Road

Tottenham 3012

VIC Australia

+61 3 9314 4273

info@barberadesign.com

www.barberadesign.com

Exclusively sold within Victoria

Australia

GET SPECIFIED

Dan Robertshaw

0488116949

helpme@getspecified.com.au

BARBERA.